

# Installing a standard TFX PSU in chassis KM2009


The chassis KM2009 normally takes the discontinued PSU MPT-302P. A standard TFX PSU can also be installed with a small modification. A special kit is included.




Stick 4 rubber feet under a standard TFX PSU size 65x85x175mm.



Install the PSU in the Chassis and slowly drill a 3mm hole on top the PSU. Make sure not to damage any internal components.

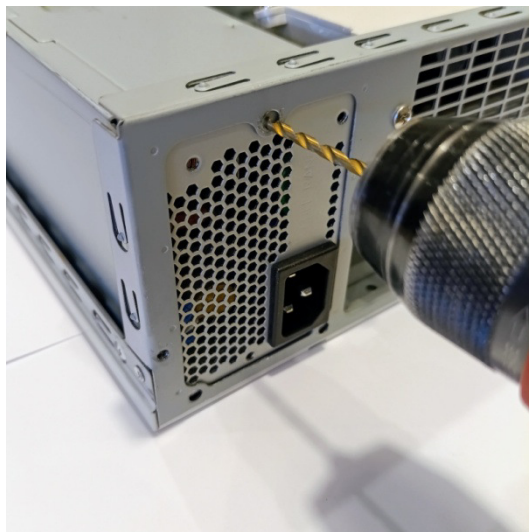

Insert a standard screw and screw it in with force to create a permanent thread.

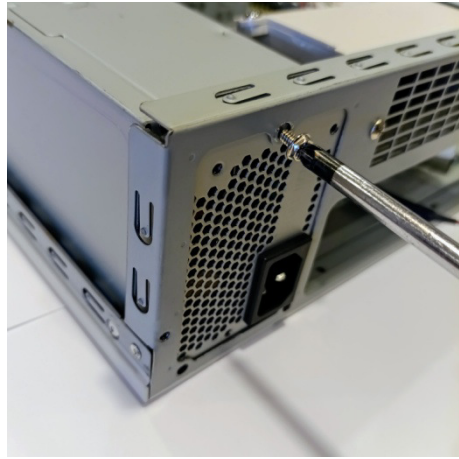

Secure the PSU at bottom with a standard screw and washer



Secure the lid with 3 SHORT screws.

